


# SMARTFRAME TEXTILE



**1** Place the four corners first, then slip the silicone into the rail. Fold the rubber corner to a 90° angle.



**2** Insert the 90° positioned textile starting at the corners.

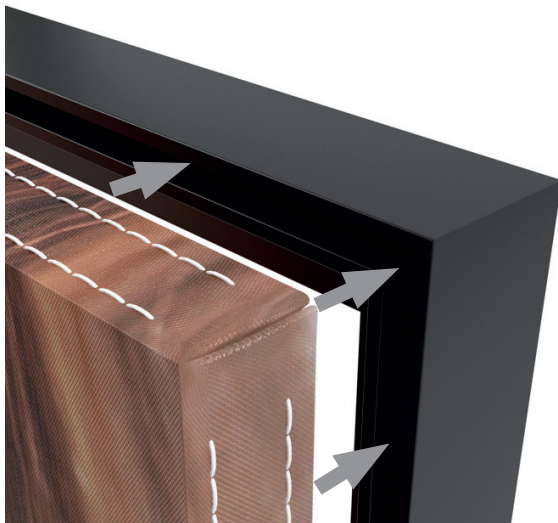

**3** Once all the corners are placed, slip your finger along the rubber stripe until it is smartly fit into the frame.



**ATTENTION**

Due to the material's natural elasticity, it is possible that you might appreciate minor unprinted areas in the textile. Once the textile is placed in its frame, they will disappear before 24 hours.

@ INFO@WALLSFORMS.COM

☎ 972.745.0800

🌐 WWW.WALLSFORMS.COM

📍 204 AIRLINE DR BLDG 200, COPPELL TX 75019